



MODEL: ST3151A03-1

Ver. 1.1

Date: 31.Oct.2011

Customer's Approval	CSOT
Signature Date	Approved By Product Director Date
	Name:
	Signature:
	Reviewed By PM Manager Date
.*	Name:
	Signature:
	Reviewed By Project Leader Date
	Name:
	Signature:
	Reviewed By PM Date
	Name:
	Signature:



Contents

Revision History	3
1. General Description	4
1.1 Product Features	4
1.2 Overview	4
1.3 General Information	4
2. Electrical Specification	5
2.1 Electrical Characteristics	5
2.1.1 Open cell Power Consumption (TA = 25 ± 2 °C)	
2.1.2 LVDS Characteristics	6
3. Input Terminal Pin Assignment	7
3.1 Interface pin assignment	7
3.2 Block Diagram of Interface	8
3.3 LVDS Interface	8
3.3.1 VESA Format (SELLVDS = L or Open)	8
3.3.2 JEIDA Format (SELLVDS = H)	9
4. Interface Timing	10
4.1 Timing Table (DE Only Mode)	10
4.2 Power On/Off Sequence	11
5. Optical Characteristics	12
5.1 Measurement Conditions	12
5.2 Optical Specifications	13
6. Mechanical Characteristics	
6.1 Mechanical Specification	16
6.2 Packing	17
6.2.1 Packing Specifications	17
6.2.2 Packing Method	17
7. Definition of Labels	
7.1 Open Cell Label	18
7.2 Carton Label	18
7.3 Pallet Label	19
8. Precautions	20
8.1 Assembly and Handling Precautions	20
8.2 Safety Precautions.	20



Revision History

Version	Date	Page (New)	Section	Description	Revision by
Ver. 1.1	31.Oct.2011	20	All	Preliminary Specification was First Issued.	Alex Jin



1. General Description

1.1 Product Features

- HD Resolution (1366 x 768)

Very High Contrast Ratio: 3000:1

- Fast Response Time

- Ultra Wide Viewing Angle: 178° (H)/178° (V) (CR ≥ 10)

- DE (Data Enable) Mode

- LVDS (Low Voltage Differential Signaling) Interface

1.2 Overview

ST3151A03-1 is a diagonal 31.5" color active matrix LCD Open cell with 1ch-LVDS interface. This Open cell is a transmissive type display operating in the normally black mode. It supports 1366 x 768 HD resolution and can display up to 16.7M colors (8-bit). Each pixel is divided into Red, Green and Blue sub-pixels which are arranged in vertical stripe. There is no backlight built-in.

This open cell dedicates for LCD TV products and provides excellent performance which includes high transparency, ultra wide viewing angle and high color depth.

1.3 General Information

Item	Specification	Unit	Note
Active Area	697.6845 (H) x 392.2560 (V)	mm	
Cell Size	714.835(H) x 410.570 (V) x 1.900 (D)	mm	
Weight	1.2	kg	Max.
Driving Scheme	a-Si TFT Active Matrix	-	
Number of Pixels	1366 x 768	pixel	
Pixel Pitch (Sub Pixel)	0.17025 (H) x 0.51075 (V)	mm	
Pixel Arrangement	RGB Vertical Stripe	-	
Display Colors	16.7 M	color	8-bit
Display Mode	Transmissive Mode, Normally Black	-	
Glass thickness (Array/CF)	0.7/0.7	mm	
Color Chromaticity	R=0.635, 0.330 G=0.310, 0.625 B=0.153, 0.044 W=0.280, 0.290		
Contrast Ratio	3000:1(Typ.)		Typical value measured at CSOT's module: MT3151A03-1)
Cell Transmittance	5.73%(Typ.)	%	
View Angle(CR>10)	+89/-89(H),+89/-89(V) (Typ.)		
Polarizer(CF side)	Anti-glare, Haze 12%, Hard Coating (3H)		
Polarizer(TFT side)	Haze 12%, Hard Coating (3H)		
	=	l	

2. Electrical Specification

2.1 Electrical Characteristics

2.1.1 Open cell Power Consumption (TA = 25 \pm 2 °C)

Parameter		G 1 1		Value	TT :	3 .7	
		Symbol	Min.	Тур.	Max.	Unit	Note
Power Supply Voltage		V _{CC}	10.8	12.0	13.2	V	(1)
Rush Current		I_{RUSH}	-	-	3	A	(2)
	White Pattern	I_{CC}	-	0.3	0.39	A	
Power Supply Current	Horizontal Stripe	I_{CC}	_	0.35	0.45	A	(3)
	Black Pattern	I_{CC}	-	0.2	0.26	A	

Note:

- (1) The ripple voltage should be controlled less than 10% of V_{CC} .
- (2) Measurement condition: V_{CC} rising time = 470 μ s.




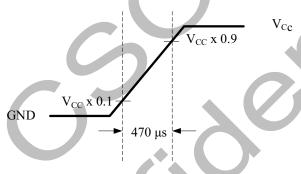


Fig. 2.1 V_{CC} rising time condition

(3) Measurement condition: V_{CC} = 12 V, Ta = 25 ± 2 °C, F = 60 Hz. The test patterns are shown as below.

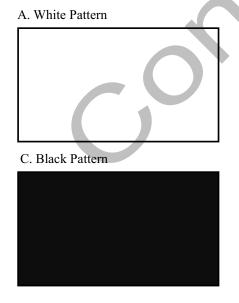



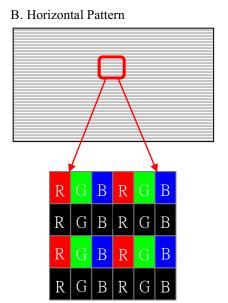



2.1.2 LVDS Characteristics

Parameter		Crumb of		Value	Unit	Note	
		Symbol	Min.	Тур.	Max.	Unit	Note
	Differential Input High Threshold Voltage	V_{TH}	+ 100	-	-	mV	
	Differential Input Low Threshold Voltage	V_{TL}	-	-	- 100	mV	
LVDS Interface	Common Input Voltage	V_{CM}	1.0	1.2	1.4	V	(1)
	Differential Input Voltage	$ V_{ID} $	200	-	600	mV	
	Terminating Resistor	R_{T}	-	100	-	ohm	
CMOS Interfere	Input High Threshold Voltage	V _{IH}	2.7	-	3.3	V	
CMOS Interface	Input Low Threshold Voltage	V _{IL}	0.0	-	0.6	V	

Note:

(1) The LVDS input signal has been defined as follows:

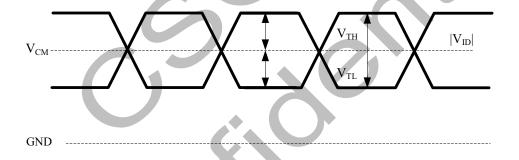


Fig. 2.3 LVDS input signal



3. Input Terminal Pin Assignment

3.1 Interface pin assignment

CN1: 300B30-0000RA-M4 (STARCONN) or equivalent (see Note (1))

Pin No.	Symbol	Description	Note
1	V _{CC}	Power Supply ,+ 12 V DC Regulated	
2	V_{CC}	Power Supply ,+ 12 V DC Regulated	
3	V_{CC}	Power Supply ,+ 12 V DC Regulated	
4	V_{CC}	Power Supply ,+ 12 V DC Regulated	
5	GND	Ground	
6	GND	Ground	
7	GND	Ground	
8	GND	Ground	
9	LVDS SEL	LVDS Data Format Selection	(2)
10	NC	For CSOT Users Only	
11	GND	Ground	
12	LV1N0	1st Channel LVDS Data Input (0-)	
13	LV1P0	1st Channel LVDS Data Input (0+)	
14	GND	Ground	
15	LV1N1	1st Channel LVDS Data Input (1-)	
16	LV1P1	1st Channel LVDS Data Input (1+)	
17	GND	Ground	
18	LV1N2	1st Channel LVDS Data Input (2-)	
19	LV1P2	1st Channel LVDS Data Input (2+)	
20	GND	Ground	
21	LVCK1N	1st Channel LVDS Clock Input (-)	
22	LVCK1P	1st Channel LVDS Clock Input (+)	
23	GND	Ground	
24	LV1N3	1st Channel LVDS Data Input (3-)	
25	LV1P3	1st Channel LVDS Data Input (3+)	
26	GND	Ground	
27	WP_VCM	For CSOT Users Only	(3)
28	SDA_VCM	For CSOT Users Only	(3)
29	SCL_VCM	For CSOT Users Only	(3)
30	GND	Ground	

ST3151A03-1 Product Specification

Note:

(1) The direction of pin assignment is shown as below:

Global LCD Panel Exchange Center


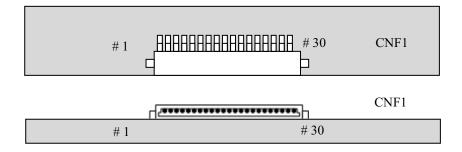


Fig. 3.1 LVDS direction sketch map

- (2) High: connect to +3.3 V → JEIDA format; Low: connect to GND or Open → VESA format.
- (3) For CSOT internal only, please let it open.

3.2 Block Diagram of Interface

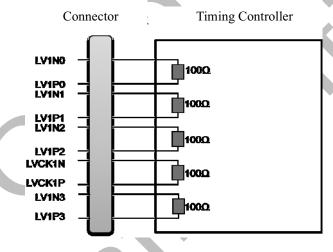


Attention:

- (1) This LCD Open cell uses a 100 ohms (Ω) resistor between positive and negative lines of each receiver input.
- (2) LVDS cable impedance shall be 50 ohms per signal line or about 100 ohms per twist-pair line respectively.


3.3 LVDS Interface

3.3.1 VESA Format (SELLVDS = L or Open)

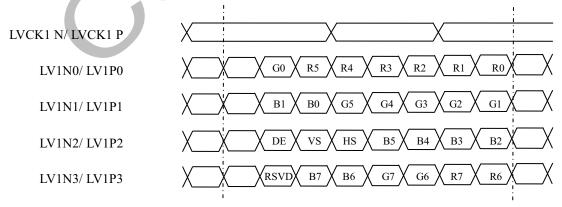


3.3.2 JEIDA Format (SELLVDS = H)

Global LCD Panel Exchange Center

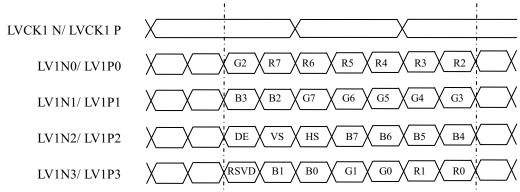

3.4 Pattern FOR Vcom Adjustment

2 line-inversion pattern (2n+1)

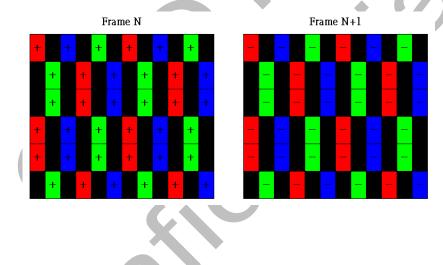



4. Interface Timing

4.1 Timing Table (DE Only Mode)

Signal	Item	Symbol	Min.	Тур.	Max.	Unit	Note
LVDS Clock	Frequency	F_{clk} $(= 1 / T_{clk})$	50.0	75.4	85.0	MHz	
	Frame Rate	F	57	60	63	Hz	
77 1	Vertical Frequency	F_{v}	47.1	48	60.9	KHz	
Vertical	Total	$T_{\rm v}$	784	806	1015	T_h	$T_{v} = T_{vd} + T_{vb}$
Term	Display	$T_{\rm vd}$		768		T_h	
	Blank	T_{vb}	16	38	247	T _h	
Horizontal Term	Total	T_h	1460	1560	2000	T_{clk}	$T_{h} = T_{hd} + T_{hb}$
	Display	T _{hd}		1366		T _{clk}	
TOTAL	Blank	T_{hb}	94	194	634	T _{clk}	

Attention:

(1) The TFT LCD Open cell is operated in DE only mode, H sync and V sync input signal have no effect on normal operation.

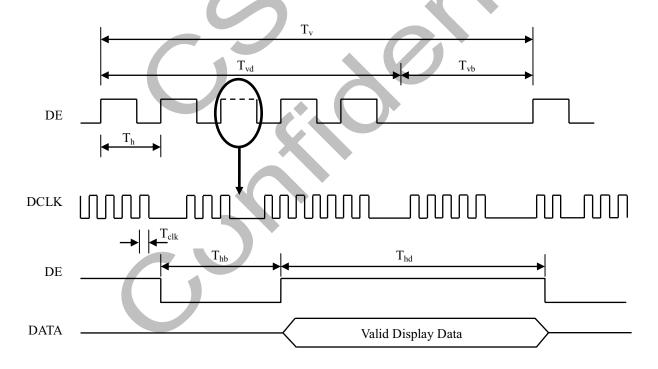


Fig. 4.1 Interface signal timing diagram

4.2 Power On/Off Sequence

To prevent a latch-up or DC operation of the Open cell, the power on/off sequence should be as the diagram below.

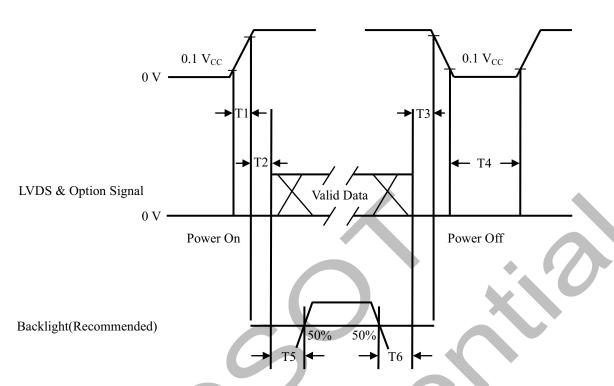


Fig. 4.2 Power On/Off

D		TTUL			
Parameter	Min. Typ.		Max.	Unit	
T1	0.5	-	10	ms	
T2	0	1	50	ms	
Т3	0	_	50	ms	
T4	1000	-	-	ms	
T5	500	-	-	ms	
Т6	100	-	-	ms	

Attention:

- (1) The supply voltage of the external system for the open cell input should follow the definition of V_{CC} .
- (2) When the customer's backlight turns on before the LCD operation or the LCD turns off before the backlight turns off, the display may momentarily become abnormal screen.
- (3) In case that V_{CC} is in off level, please keep the level of input signals on the low or high impedance. If $T_2 < 0$, that may cause electrical overstress.
- (4) T4 should be measured after the module has been fully discharged between power off and on period.
- (5) Interface signal shall not be kept at high impedance when the power is on.

5. Optical Characteristics

5.1 Measurement Conditions

The table below is the test condition of optical measurement.

Item	Symbol	Value	Unit			
Ambient Temperature	T_A 25 ± 2		°C			
Ambient Humidity	H_A	50 ± 10	% RH			
Supply Voltage	V_{CC}	12	V			
Driving Signal	Refer to the typical value in Chapter 2: Electrical Specification					
Vertical Refresh Rate	F_R	60	Hz			

To avoid abrupt temperature change during optical measurement, it's suggested to warm up the LCD module more than 45 minutes after lighting the backlight and in the windless environment.

To measure the LCD cell, it is suggested to set up the standard measurement system as Fig. 5.1. The measuring area S should contain at least 500 pixels of the LCD cell as illustrated in Fig. 5.2 (A means the area allocated to one pixel). In this model, for example, the minimum measuring distance Z is 370 mm when θ is 2 degree. Hence, 500 mm is the typical measuring distance. This measuring condition is referred to 301-2H of VESA FPDM 2.0 about viewing distance, angle, and angular field of view definition.

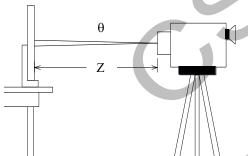


Fig. 5.1 The standard set-up system of measurement

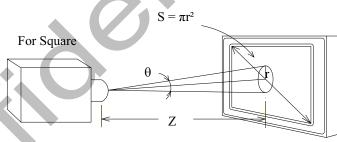


Fig. 5.2 The area S contains at least 500 pixels to be measured

$$N = \frac{S}{A} \geqslant 500 \text{pixels}$$

N means the actual number of the pixels in the area S.



5.2 Optical Specifications

The table below of optical characteristics is measured by MINOLTA CS2000, MINOLTA CA310, ELDIM OPTI Scope-SA and ELDIM EZ Contrast in dark room.

Ite	m	Symbol	Condition	Min.	Тур.	Max.	Unit	Note
Static Contrast Ratio		CR		-	3000	-	-	(1) (2)
Response Time		T_{L}		-	6.5	-	ms	(3)
Center Transmitt	ance	Т%		-	5.73		%	(2) (4)
	D 1	R_X			0.635		-	
	Red	R_{Y}	$\theta_{\rm H}$ = 0°, $\theta_{\rm V}$ = 0°		0.330		=	
		G_X	Normal direction at	Тур.	0.310		-	(2) (5)
Color	Green	G_{Y}	center point with CSOT Module : MT3151A03-1		0.625	Тур.		
Chromaticity	Blue	B_X		- 0.03	0.153	+ 0.03	(-/	(2) (5)
(CIE1931)		B_{Y}			0.044			
	XXII : 4	W_X			0.280		-	
	White	W _Y			0.290		-	
	Color Gamut	CG		68	72	-	% NTSC	
		$\theta_{\mathrm{H}^{+}}$		F	89	=		
Viewing Angle	Horizontal	$\theta_{ ext{H-}}$		K	89	-	F.	
	XX .: 1	θ_{V^+}	CR ≥ 10		89	-	Deg.	(6)
	Vertical	$\theta_{ ext{V-}}$		_	89	-		

Note:

(1) Definition of static contrast ratio (CR):

It's necessary to switch off all the dynamic and dimming function when measuring the static contrast ratio.

Static Contrast Ratio (CR) =
$$\frac{\text{CR-W}}{\text{CR-D}}$$

CR-W is the luminance measured by LMD (light-measuring device) at the center point of the LCD module with full-screen displaying white. The standard setup of measurement is illustrated in Fig. 5.3; CR-D is the luminance measured by LMD at the center point of the LCD module with full-screen displaying black. The LMD in this item is CS2000.

(2) The LMD in the item could be a spectroradiometer such as (KONICA MINOLTA) CS2000, CS1000(TOPCON), SR-UL2 or the same level spectroradiometer. Other display color analyzer (KONICA MINOLTA) CA210, CA310 or (TOPCON) BM-7 could be involved after being calibrated with a spectroradiometer on each stage of a product.

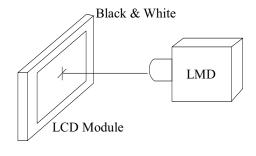


Fig. 5.3 The standard setup of CR measurement

(3) Response time T_L is defined as the average transition time in the response time matrix. The table below is the response time matrix in which each element $t_{X \text{ to } Y}$ is the transition time from luminance ratio X to Y. X and Y are two different luminance ratios among 0%, 25%, 50%, 75%, and 100% luminance. The transition time $t_{X \text{ to } Y}$ is defined as the time taken from 10% to 90% of the luminance difference between X and Y (X < Y) as illustrated in Fig.6.4. When X > Y, the definition of $t_{X \text{ to } Y}$ is the time taken from 90% to 10% of the luminance difference between X and Y. The response time is optimized on refresh rate $F_r = 60$ Hz.

Measu	ıred		Luminance Ratio of Previous Frame						
Transition Time		0%	25%	50%	75%	100%			
	0%		t _{25% to 0%}	t _{50% to 0%}	t _{75% to 0%}	t _{100% to 0%}			
Luminance	25%	t _{0% to 25%}		t _{50% to 25%}	t _{75% to 25%}	t _{100% to 25%}			
Ratio of	50%	$t_{0\% \text{ to } 50\%}$	t _{25% to 50%}		t _{75% to 50%}	t _{100% to 50%}			
Current Frame	75%	t _{0% to 75%}	t _{25% to 75%}	t _{50% to 75%}		t _{100% to 75%}			
	100%	t _{0% to 100%}	t _{25% to 100%}	t _{50% to 100%}	t _{75% to 100%}				

 $t_{X \text{ to } Y}$ means the transition time from luminance ratio X to Y.

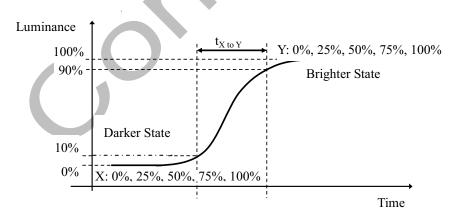


Fig. 5.4 The definition of $t_{X \text{ to } Y}$

All the transition time is measured at the center point of the LCD module by ELDIM OPTI Scope-SA.

ST3151A03-1 Product Specification

(4) Definition of center Transmittance (T%):

Global LCD Panel Exchange Center

The transmittance is measured with full white pattern (Gray 255)

(5) Definition of color chromaticity:

Each chromaticity coordinates (x, y) are measured in CIE1931 color space when full-screen displaying primary color R, G, B and white. The color gamut is defined as the fraction in percent of the area of the triangle bounded by R, G, B coordinates and the area is defined by NTSC 1953 color standard in the CIE color space. Chromaticity coordinates are measured by CS2000 and the standard setup of measurement is shown in Fig. 5.7.

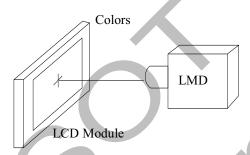


Fig. 5.5 The standard setup of color chromaticity measurement

(6) Definition of viewing angle coordinate system (θ_H , θ_V):

The contrast ratio is measured at the center point of the LCD module. The viewing angles are defined at the angle that the contrast ratio is larger than 10 at four directions relative to the perpendicular direction of the LCD module (two vertical angles: up θ_{V+} and down θ_{V-} ; and two horizontal angles: right θ_{H+} and left θ_{H-}) as illustrated in Fig. 5.8. The contrast ratio is measured by ELDIM EZ Contrast.


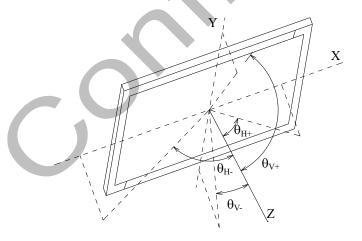


Fig. 5.6 Viewing angle coordination system

6. Mechanical Characteristics

6.1 Mechanical Specification



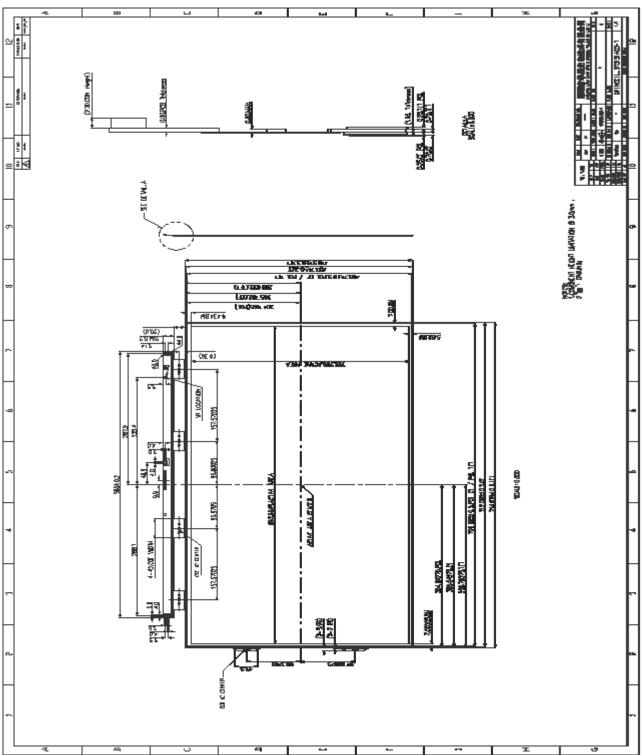


6.2 Packing

6.2.1 Packing Specifications

Item	Specification		
	Quantity	Dimension (mm)	Weight (kg)
Packing Box	24 pcs / box	923.00 (L) x 663.00 (W) x252.00 (H)	Net Weight: 28.20 (Max.)
			Gross Weight: 40.00 (Max.)
Pallet	1	1420.00 (L) x 1120.00 (W) x 150.00 (H)	Net Weight: 33
Stack Layer	5		
Boxes per Pallet	10 boxes / pallet		
Pallet after Packing	240 pcs / pallet	1420.00 (L) x 1120.00 (W) x 1413.00 (H)	Gross Weight: 434

6.2.2 Packing Method

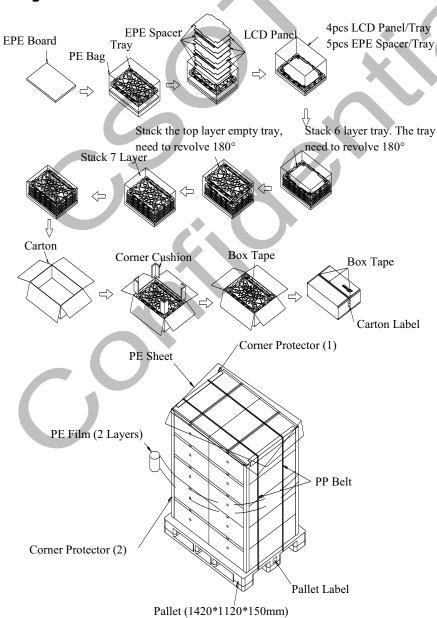

The copyright belongs to Shenzhen China Star Optoelectronics Technology Co., Ltd. Any unauthorized use is prohibited.

17 / 20



7. Definition of Labels


7.1 Open Cell Label



For RoHS compatible products, CSOT will add RoHS for identification.


Model Name: ST3151A03-1

Ver.X.X: Version, for example: 0.1, 0.2, ..., 1.1, 1.2, ..., 2.1, 2.2, ...




Year: 2010 = 10, 2011 = 11 ... 2020 = 20, 2021 = 21...

Week: 01, 02, 03 ...



7.2 Carton Label







Manufactured Date:

Year: 2010 = 10, 2011 = 11...2020 = 20, 2021 = 21...


Month: $1\sim9$, $A\sim C$, for Jan. \sim Dec.

Date: $01\sim31$, for 1st to 31st

Model Version Code: Version of product, for example: 01, 02, 11, 12...

7.3 Pallet Label



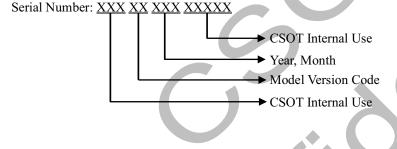



8. Precautions

8.1 Assembly and Handling Precautions

- (1) Do not apply rough force such as bending or twisting to the open cell during assembly.
- (2) It is recommended to assemble or install a open cell into the user's system in clean working areas. The dust and oil may cause electrical short or damage the polarizer.
- (3) Do not apply pressure or impulse to the open cell to prevent the damage to the open cell.
- (4) Always follow the correct power-on sequence. This can prevent the damage and latch-up to the LSI chips.
- (5) Do not plug in or pull out the interface connector while the open cell is in operation.
- (6) Use soft dry cloth without chemicals for cleaning because the surface of polarizer is very soft and easily be scratched.
- (7) Moisture can easily penetrate into the open cell and may cause the damage during operation.
- (8) High temperature or humidity may deteriorate the performance of the open cell. Please store open cell in the specified storage conditions.
- (9) When ambient temperature is lower than 10 °C, the display quality might be deteriorated. For example, the response time will become slow.

8.2 Safety Precautions

- (1) If the liquid crystal material leaks from the panel, it should be kept away from the eyes or mouth. In case of contact with hands, skin or clothes, it has to be washed away thoroughly with soap.
- (2) After the Open cell end of life, it is not harmful in case of normal operation and storage.